

AS350 COWLING MAINTENANCE STEPS

The AS350 Cowling Maintenance Steps Installation provides easy access to the engine and transmission deck for routine maintenance and inspection. Large enough for winter boots, the steps are located on both sides of the main transmission cowl panels immediately above the cargo compartments.



WEIGHT

Negligible

CERTIFICATION STATUS

TCCA STC, FAA STC

PART NUMBER

350-200094

350-200104

